


Construction and assembly instructions

Installation recess

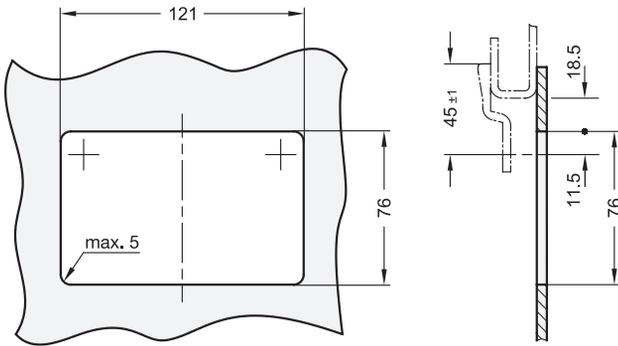

The installation recess in the door, cover or hatch for mounting the latch with gripping tray, must be cut as shown in the outline drawing.


Depending on position of the latch arm, the 18.5 mm edge spacing between frame and nick must be ensured sideways and / or top and bottom to make sure that the latch arm is positioned behind the frame.

For the assembly, insert the front frame together with the pre-assembled latch arm from the front through the nick of the door by tilting.


Place the plastic tray from the back onto the bore pegs of the front frame.

The M4x12 fillister-head screws included are then screwed in from the rear and tightened to fix and wedge the whole unit in place. The minimum screw-in depth of the screw is guaranteed with a maximum door wall thickness of 7 mm.

Installation

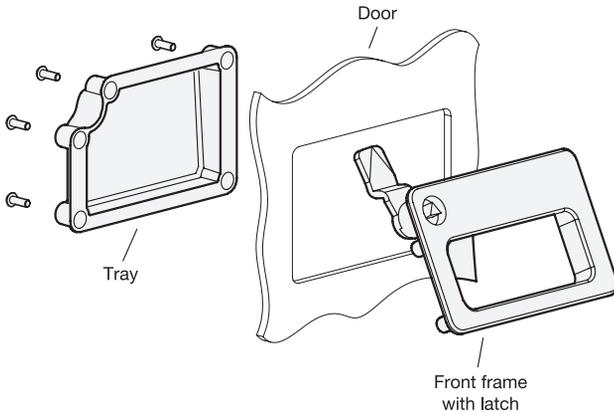

Assembly example

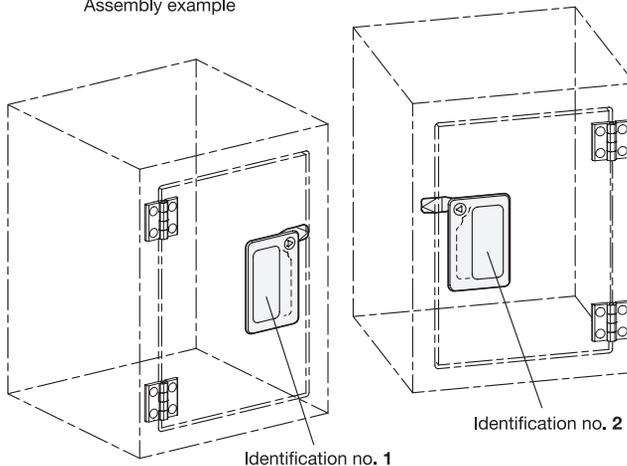

3.1
3.2
3.3
3.4
3.5
3.6
3.7
3.8
3.9

